

## PANS WITH GRIP

Wood, thermoplastic or removable.



 
FRYING PAN  
ø 20\* | 24\* | 28\* | 32\* cm.



SAUTE PAN  
ø 20\* | 24\* | 28\* | 32\* cm.



WOK  
ø 32 cm.



FISH PAN  
ø 36 x 25\* cm.



GRILL PAN  
□ 28 x 28\* cm.



SAUCE PAN  
ø 14 | 16 | 18\* cm.



CREPE PAN  
ø 24 | 28\* cm.



## TWIN-HANDLE POTS

Ideal for oven, grill, BBQ or even open fire.

PAELLA PAN | COVER\*  
ø 16 | 20\* | 24\* | 28\* | 32\* cm



 
SHALLOW CASSEROLE  
ø 24\* | 28\* | 32\* cm.



CASSEROLE  
ø 16 | 20\* | 24\* | 28\* | 32\* cm.



STOCK POT  
ø 20 | 24\* | 28 cm.



OVAL COCOTTE  
ø 28 x 22\* cm.



TAJINE  
ø 28\* cm.



OVENWARE  
□ 25 x 18 | 30x20 | 35x25 cm.



PLANCIA  
ø 36 cm



You can choose from a glass cover or cast aluminium cover.  
The \* paella pan can be used as a cover on the casserole or stock pot.

The sizes marked with \* are available for induction.